



Porsche 718 Cayman/Boxster Full-width tail light kit installation instruction

www.porschemaster.com

Before you start make sure:

Prepare the necessary tools: socket wrench, wrench, screwdriver set, Masking tape, markers

Prepare for at least 3 hours



You may need to adjust the position of the spoiler after installation, please note that when removing the spoiler screws and installing, the screws may fall into the holes of the rear bumper bracket



1.raise the spoiler



2.Remove spoiler retaining screws



3.Use a marker to mark the location of the fixing screws



4.Remove the fixing screws and remove the spoiler



5.open the trunk lid



6.remove the plug



7.unscrew using a T30




8.Protect with masking tape



9.Remove the tail lights, use a plastic crowbar to open if necessary



10.Remove tail light plug

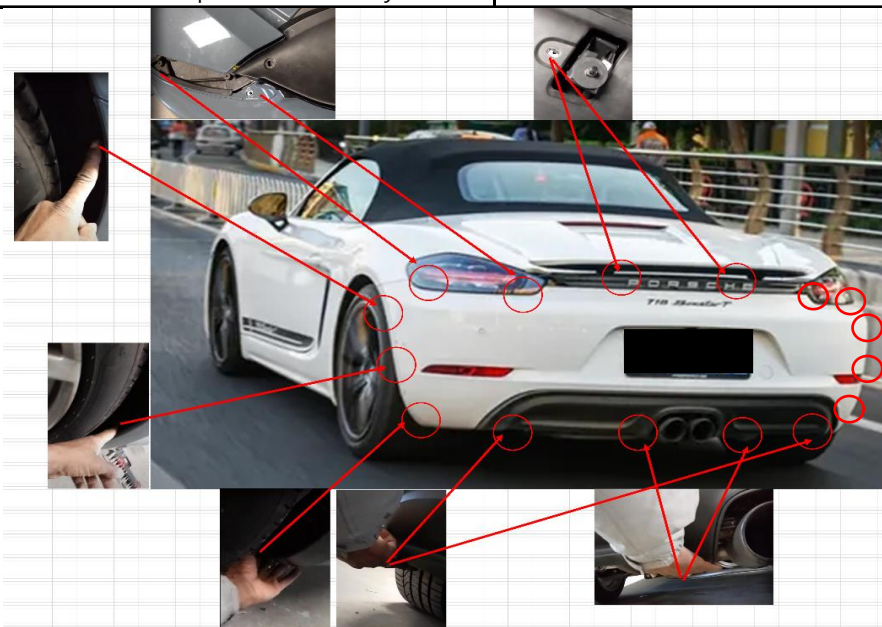

11.Remove 16 T30 screws (circled mark)



12.remove rear bumper



13.Replace the original car rear wing base



14.Use a non-destructive plug to connect to the rear light interface



15. Install back bumper, tail lights, spoiler